


## PLUG INSTALLATION

1. Ensure the hole is free of debris and moisture. Then position the leading plug into the hole and gently tap until flush.
2. Pull collated strip away from installed plug.
3. Tap plug once more to flush with the jamb surface.

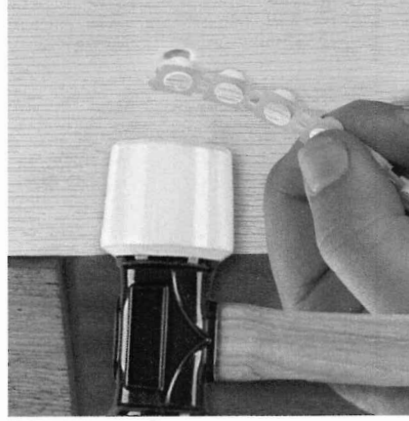


### REMOVING A PLUG AND SCREW

- Using a trim screw (#7 or smaller), center the point in the plug you are looking to remove. Slowly install the screw until the point passes through the plug and "bottoms out" on the screw head below.
- Remove the plug by pulling on the trim screw.
- Remove the felt from the setting tool, and reverse the drill setting and back out the screw.

THCTXTINSERT (0419)

## PRODUCT FEATURES

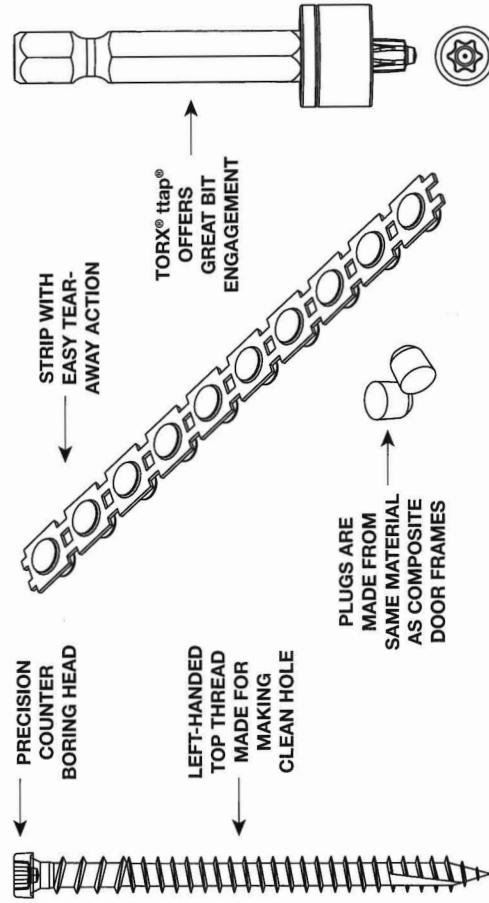

\*For more details on unit installation, reference Therma-Tru Pre-Hung Unit Installation instructions.

Certain states or jurisdictions, notably Florida and the coast of Texas, have specific installation requirements and may require installation in strict accordance with the product approval for a specific product. You should always check with the local authority having jurisdiction for any specific installation requirements that may apply. Specific product approval instructions, including those required for the High Velocity Zone (HVHZ), are available at <http://www.thermatru.com>

**FastenMaster.**  
**Cortex**  
Hidden Fastening System

**FASTENMASTER**  
**800-518-3569**

**153 BOWLES ROAD, AGAWAM, MA 01001**  
**WWW.FASTENMASTER.COM**

FastenMaster® and Cortex® are trademarks of OMG Inc. Copyright © 2019 OMG, Inc. TORFX® is a registered trademark of Acument Intellectual Properties, LLC. ttap® is a registered trademark of Infast AS Limited. All rights reserved.

## FASTENER INSTALLATION PROCEDURE

The FastenMaster Cortex Hidden Fastening System for Therma-Tru Composite Door Frames delivers a clean fastener-free look without the need to pre-drill.

### SUGGESTED DRILLS:


- Cordless drill with 1/2" chuck & 18V battery
- Impact driver

### FASTENER LOCATIONS:


Place screws at each hinge location and one between each hinge, with shims placed above each screw.



Hinge




Between Hinge

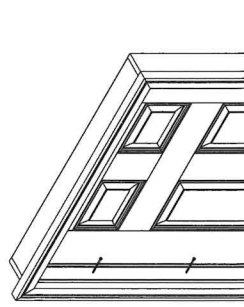


### FOR UNITS WITH MULL POST(S)

Shim above the mull post(s), drive the fastener through the frame into the header, on each side of the mull post(s).

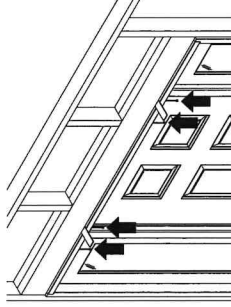

### SETTING THE FASTENER:

Using the setting tool, drive the fastener to the preset level below the trim surface. The fastener must be driven perpendicular to the surface. The felt on the setting tool will automatically set the proper plug depth while the fastener is inserted.

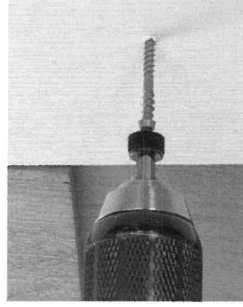

**THERMA-TRU**  
DOORS



1-800-843-7628  
(1-800-THERMATRU)  
8:00 a.m. to 6:00 p.m. EST  
Monday through Friday



Therma-Tru Doors  
Customer Service  
1750 Indian Wood Circle  
Maumee, Ohio 43537

©2019 Therma-Tru Corp. All rights reserved. THERMA-TRU and the Therma-Tru Logo are trademarks of Therma-Tru Corp. Registered trademarks are registered in the U.S. and may be registered internationally. Therma-Tru Corp. is an operating company of Fortune Brands Home & Security, Inc. All trademarks are property of their respective owners.